



ONEIDA COUNTY SHERIFF'S OFFICE



Grady M. Hartman
Sheriff

Daniel L. Hess
Chief Deputy

Weather Alert Radio Set-Up Procedures Alert Works EAR-10 Emergency Alert Weather Radio

Battery Installation

Four (4) AA alkaline batteries are used to provide back-up power to the Weather Alert Radio. The battery hatch is located in the bottom of the radio. **DO NOT USE RECHARGEABLE BATTERIES.** Batteries provide emergency power for the radio in case of a power outage! Plug the radio into a standard 120-volt outlet and plug the AC adapter into the back of the radio at input marked DC 6V 300mA. *Turn the Weather Radio Switch (on the top left-side of the unit) to **ON***.

Program the Weather/Hazard Channel for Your Area (Page 2 of Owners Manual)

- Press **MENU**
- Press **UP** directional arrow until **CHANNEL** is displayed
- Press **SELECT**
- Press **UP** directional arrow until you hear the broadcast of your station
- Press **SELECT** to save station selection

Note: you will hear a voice broadcast when you have found your station, static is heard on channels not received in your area.

- Press **MENU** to close menu mode.

*For best possible reception, put out the antenna and extend it to its full length above the radio.

Programming Alert Type : Display, Voice, or Tone (Page 10 of Owners Manual)

- Press **MENU** button to open menu options
- Press **UP** directional arrow to scroll through menu options until **ALT TYPE** (Alert Type) is displayed, then press **SELECT**
- Press **UP** directional arrow to scroll through the following 3 alert types “Display, Voice, Tone” (refer to Page 10 for description of tone patterns to choose from)
- Press **SELECT** to choose the Alert Type you want
- Press **MENU** to exit menu programming mode.

'ANY' S.A.M.E. Codes is the Default Factory Setting (Page 8 of Owners Manual)

The Weather Radio comes preprogrammed to receive NWS Weather & Hazard Alert transmissions for all S.A.M.E. county codes within range. If this is what you want, leave the radio set to 'ANY'.

Trouble-Shooting (Page 12 of Owners Manual)

Warranty & Service (Page 15 & 16 of Owners Manual)